SWAGBOARD®

ELECTRIC SKATEBOARD
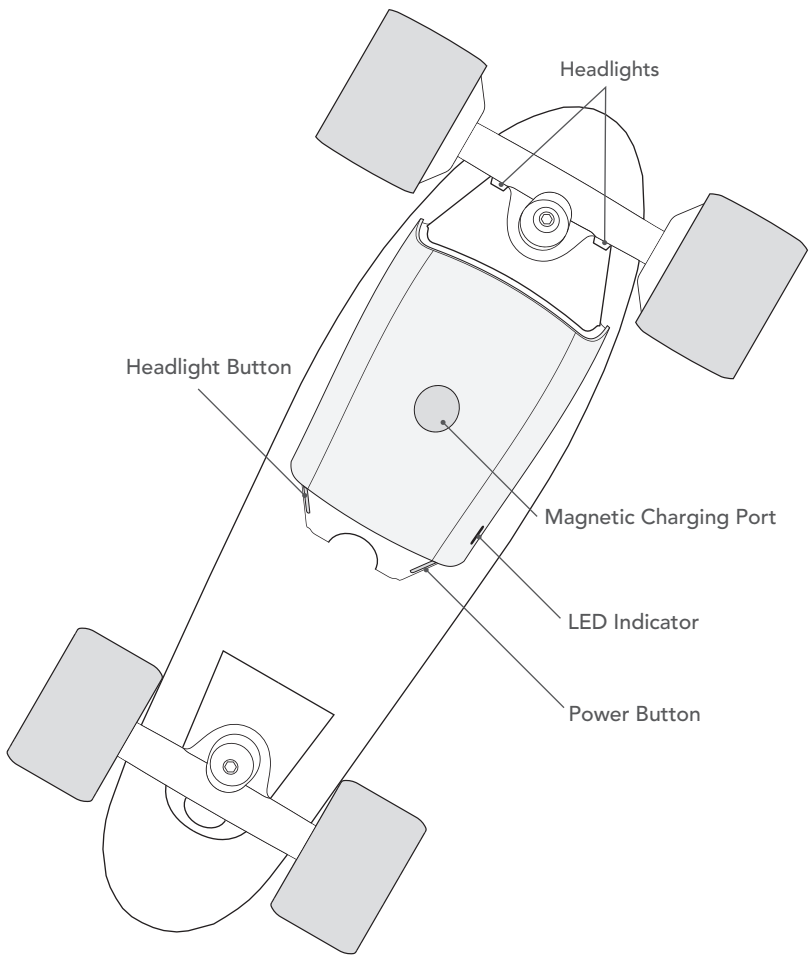
SPECTRA

MINI

Quick Start Guide

Meet the Spectra Mini

Follow along with this guide to get to know your board better. Let's roll!

Motorized Wheel

SenDeck

Headlights

Headlight Button

Magnetic Charging Port

LED Indicator

Power Button

01 Download the App

- Search for eBoard GO in the App or Play Store and install the app.
- Turn on your phone's Bluetooth function then sign up or log into the app with your account.
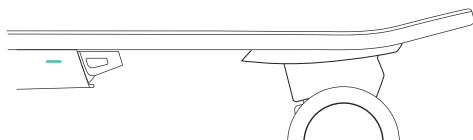- Connect to your board via the app. For help, visit our website or contact customer service.

GET IT ON
Google Play

Download on the
App Store

02 Check the Battery Level

Press and hold the Power Button for two seconds to turn the board on. The LED Indicator will turn on and the board will emit a beeping sound.
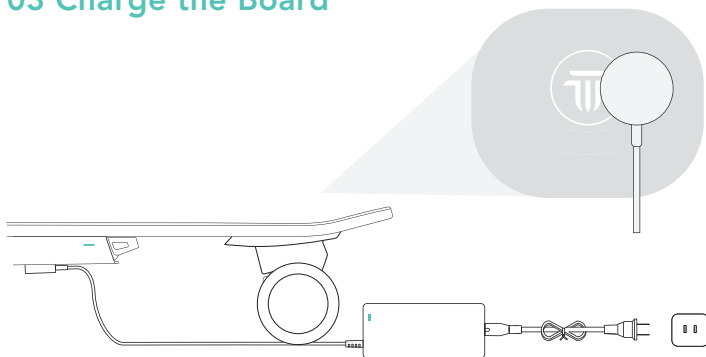
- Check the LED Indicator color to see battery life.

  Blue/Green (100% ~ 20%)
  Yellow (20% ~ 5%)
  Red (5% ~ 1%)

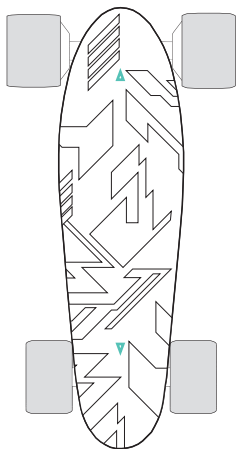- Check the app to see precise battery life and remaining ride time.

⚡ 100 %   30 Min

03 Charge the Board

Plug the charger into a power source and connect the end to the magnetic charging port. The charger's light turns red during charging. It will turn green to indicate a full charge.
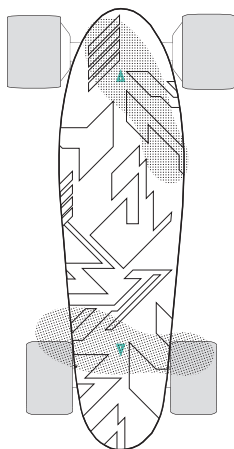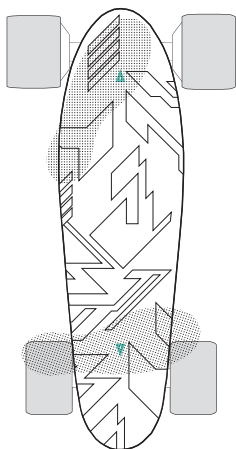
04 Learn About the SenDeck

SENSORS

There are two sensor areas on the SenDeck of SPECTRA Mini.

Your feet should press on each △ arrow.

05 Ride Spectra

1. Step On
First, check section 04 for standing postures. Step on the deck with your front foot then step on with your rear foot.

Beeping Pattern: ●

2. Stand Up Straight
Keep your body relatively straight with your knees slightly bent. Try to maintain balance and keep the deck level.
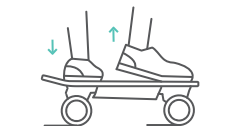
Beeping Pattern: ● ●

3. Move Forward
Lean your body slightly forward. The Spectra will speed up gradually.

4. Lean to Make Turns
To turn left/right, lean your body left/right. Tilt the deck to steer more easily.

5. Slow Down & Brake
Lean your body slightly backwards to slow to a stop. Lift your front heel to further reduce acceleration and slow down more quickly.

Beeping Pattern: ● ● ● ● ● ● ●

6. Step Off to Stop Instantly
Jump off the side of the board or rapidly tap with your rear foot to slow down and stop quickly.

Beeping Pattern: ━━━━

Note: Exercise caution when jumping off the board. Do not do this if you are not familiar with this maneuver.

06 Specifications

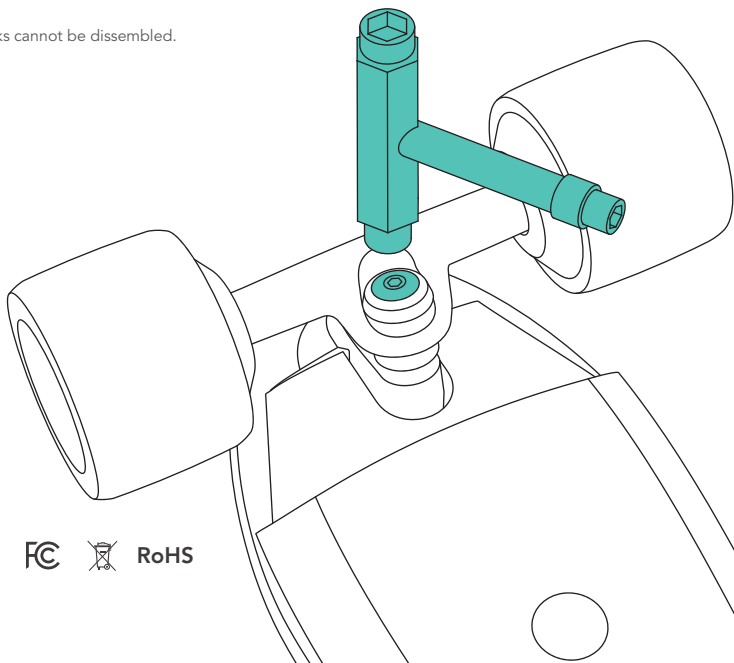|	
Model	Spectra Mini
Size	23 x 10 x 5.5 in
Weight	9 lbs
Motor	200 W x 1
Range*	5.0 ~ 5.6 miles
Max. Speed*	9.3 mph
Max. Slope*	7° uphill / 5° downhill
Battery	19.2 V, 1500 mAh, 29.76 Wh
Recharging Time	Approx. 22 ~ 30 min.
Max. Load	180 lbs

*Actual Range, Max. Speed and Max. Slope may vary depending on rider weight, outdoor
temperatures, terrain, and other environmental factors.

07 Adjusting the Trucks

Use the provided tool to loosen the trucks if desired.
Loosening them slightly will allow to the deck to tilt
more easily which may aid in turning.

Note: The trucks cannot be dissembled.

CE ⓤ FC 🖾 RoHS

SWAGBOARD®